

Contents & Index

	Page		Page
Introduction	3	Bleeding Hydraulic system	25
Controls	4	Clutch	25
Instruments	5	Wheels & Tyres	26
Console	6	Jacking Tool Kit	27
Ignition/Starter Switch	7	Electrical	28
Steering Column Controls	8	Alternator	28
Heating & Ventilation	9	Starter	28
Steering Column	10	Battery	28
Seats & Seat Belts	10	Fuses	29
Door Locks	11	Headlamps	30
Windows	11	Rear Lamps	31
Front Compartment	11	Side & front indicator lamps	31
Sun roof	12	Flasher repeater lamps	31
Engine compartment (lid)	12	Fog lamp, spot lamp	31
Rear Luggage compartment	12	Rear Fog Lamp	31
Cleaning	12	Roof lamp	31
Engine Starting	13	Boot lamp	31
Running in	13	Windscreen wipers	32
Fuel System	14	Windscreen washer	32
Lubrication system	16	Forecourt service	32
Lubricants	17	Tyre Pressures	33
Cooling System	18	Maintenance	33
Tappet adjustment	20	Servicing schedules	34
Ignition adjustment	21	Specifications	36
Transmission	22	Diagram of front hub assembly	39
Steering & Suspension	23	Diagram of rear hub assembly	40
Speedometer	23	Wiring Diagram	41
Brakes	24		