

Fig 10

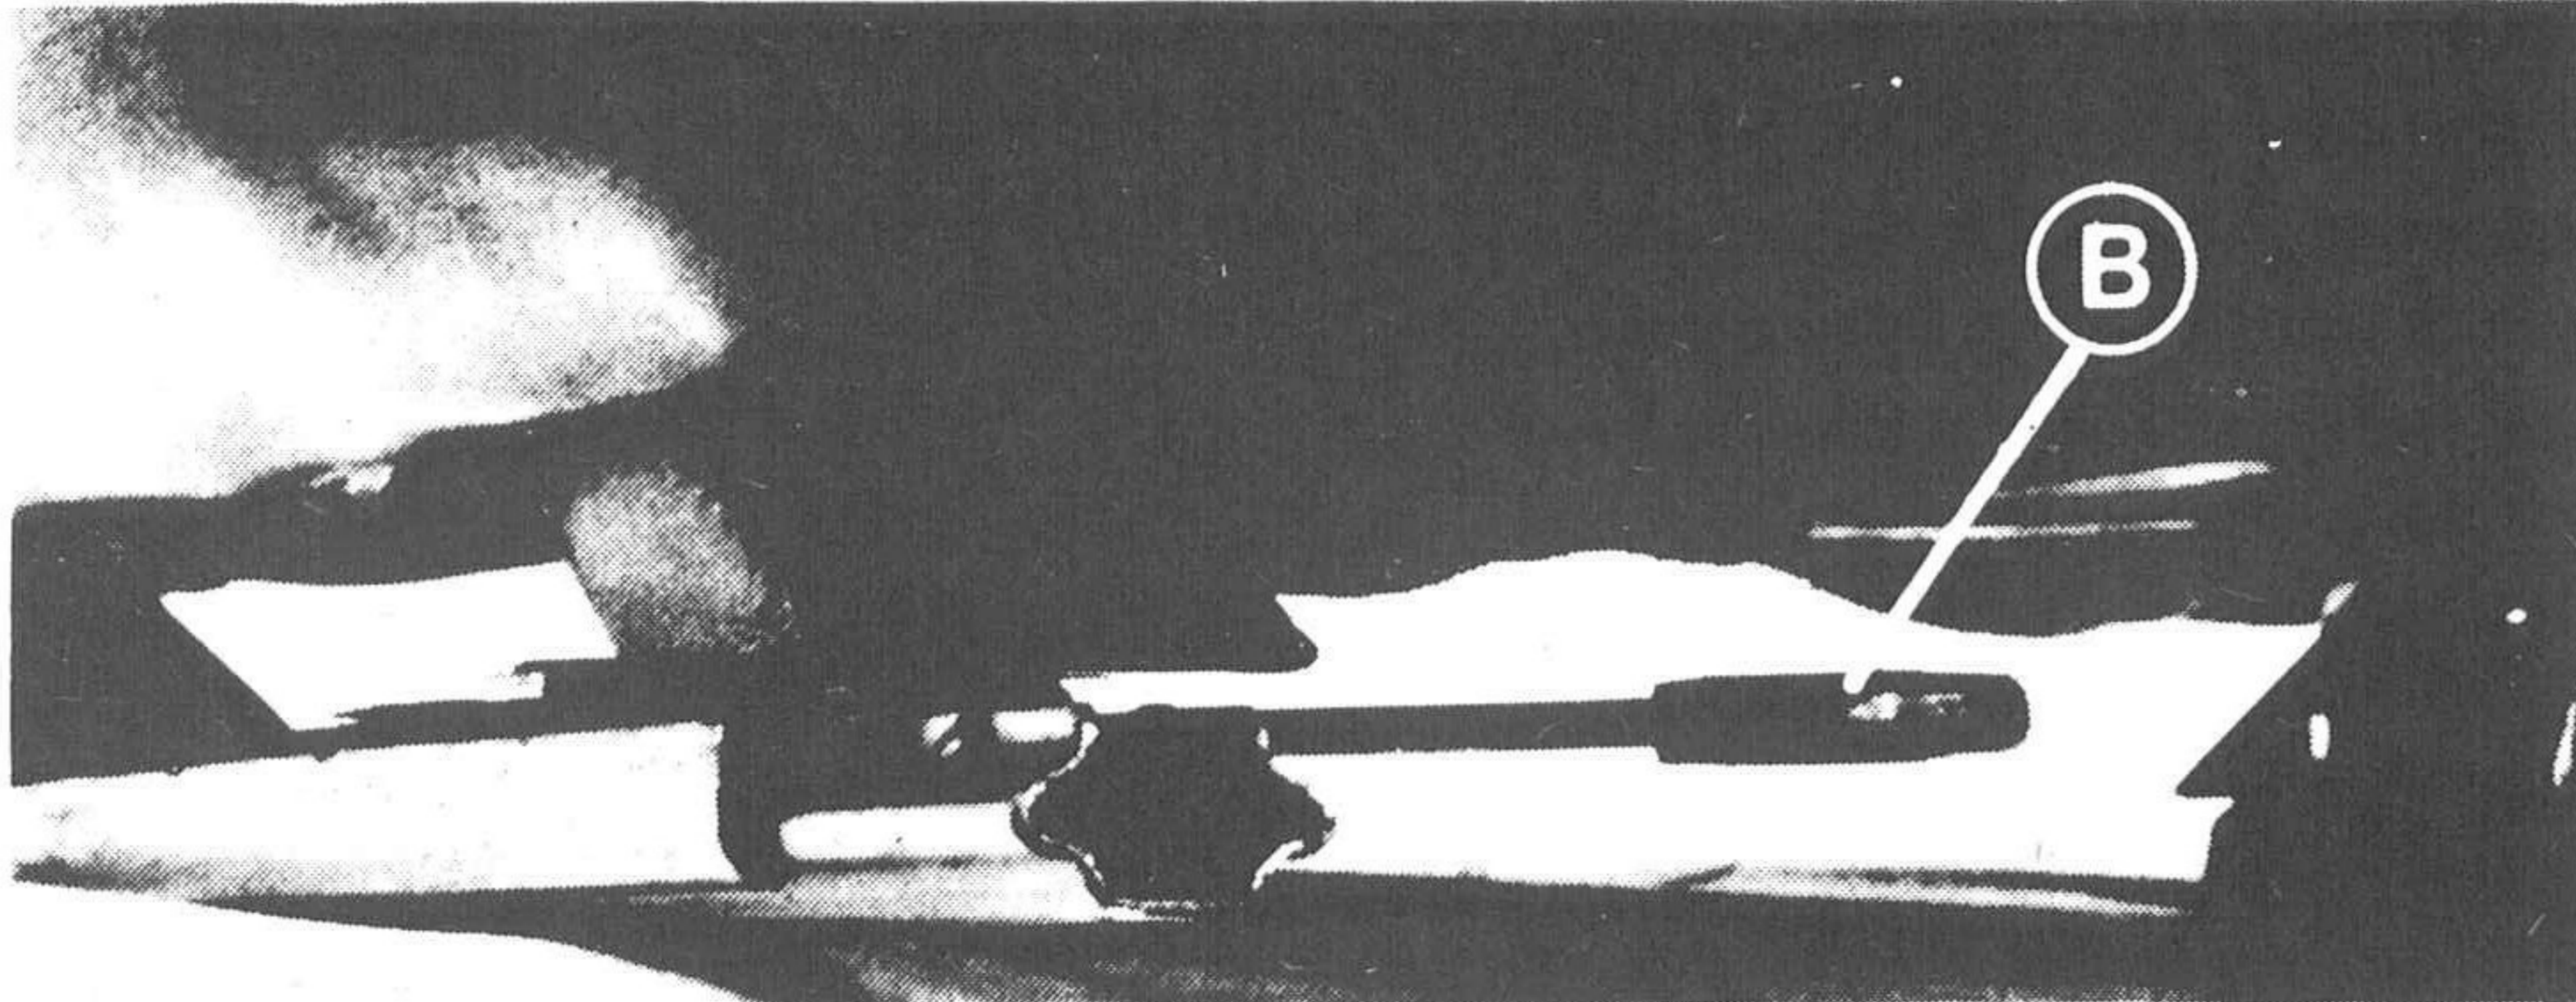


Fig 11

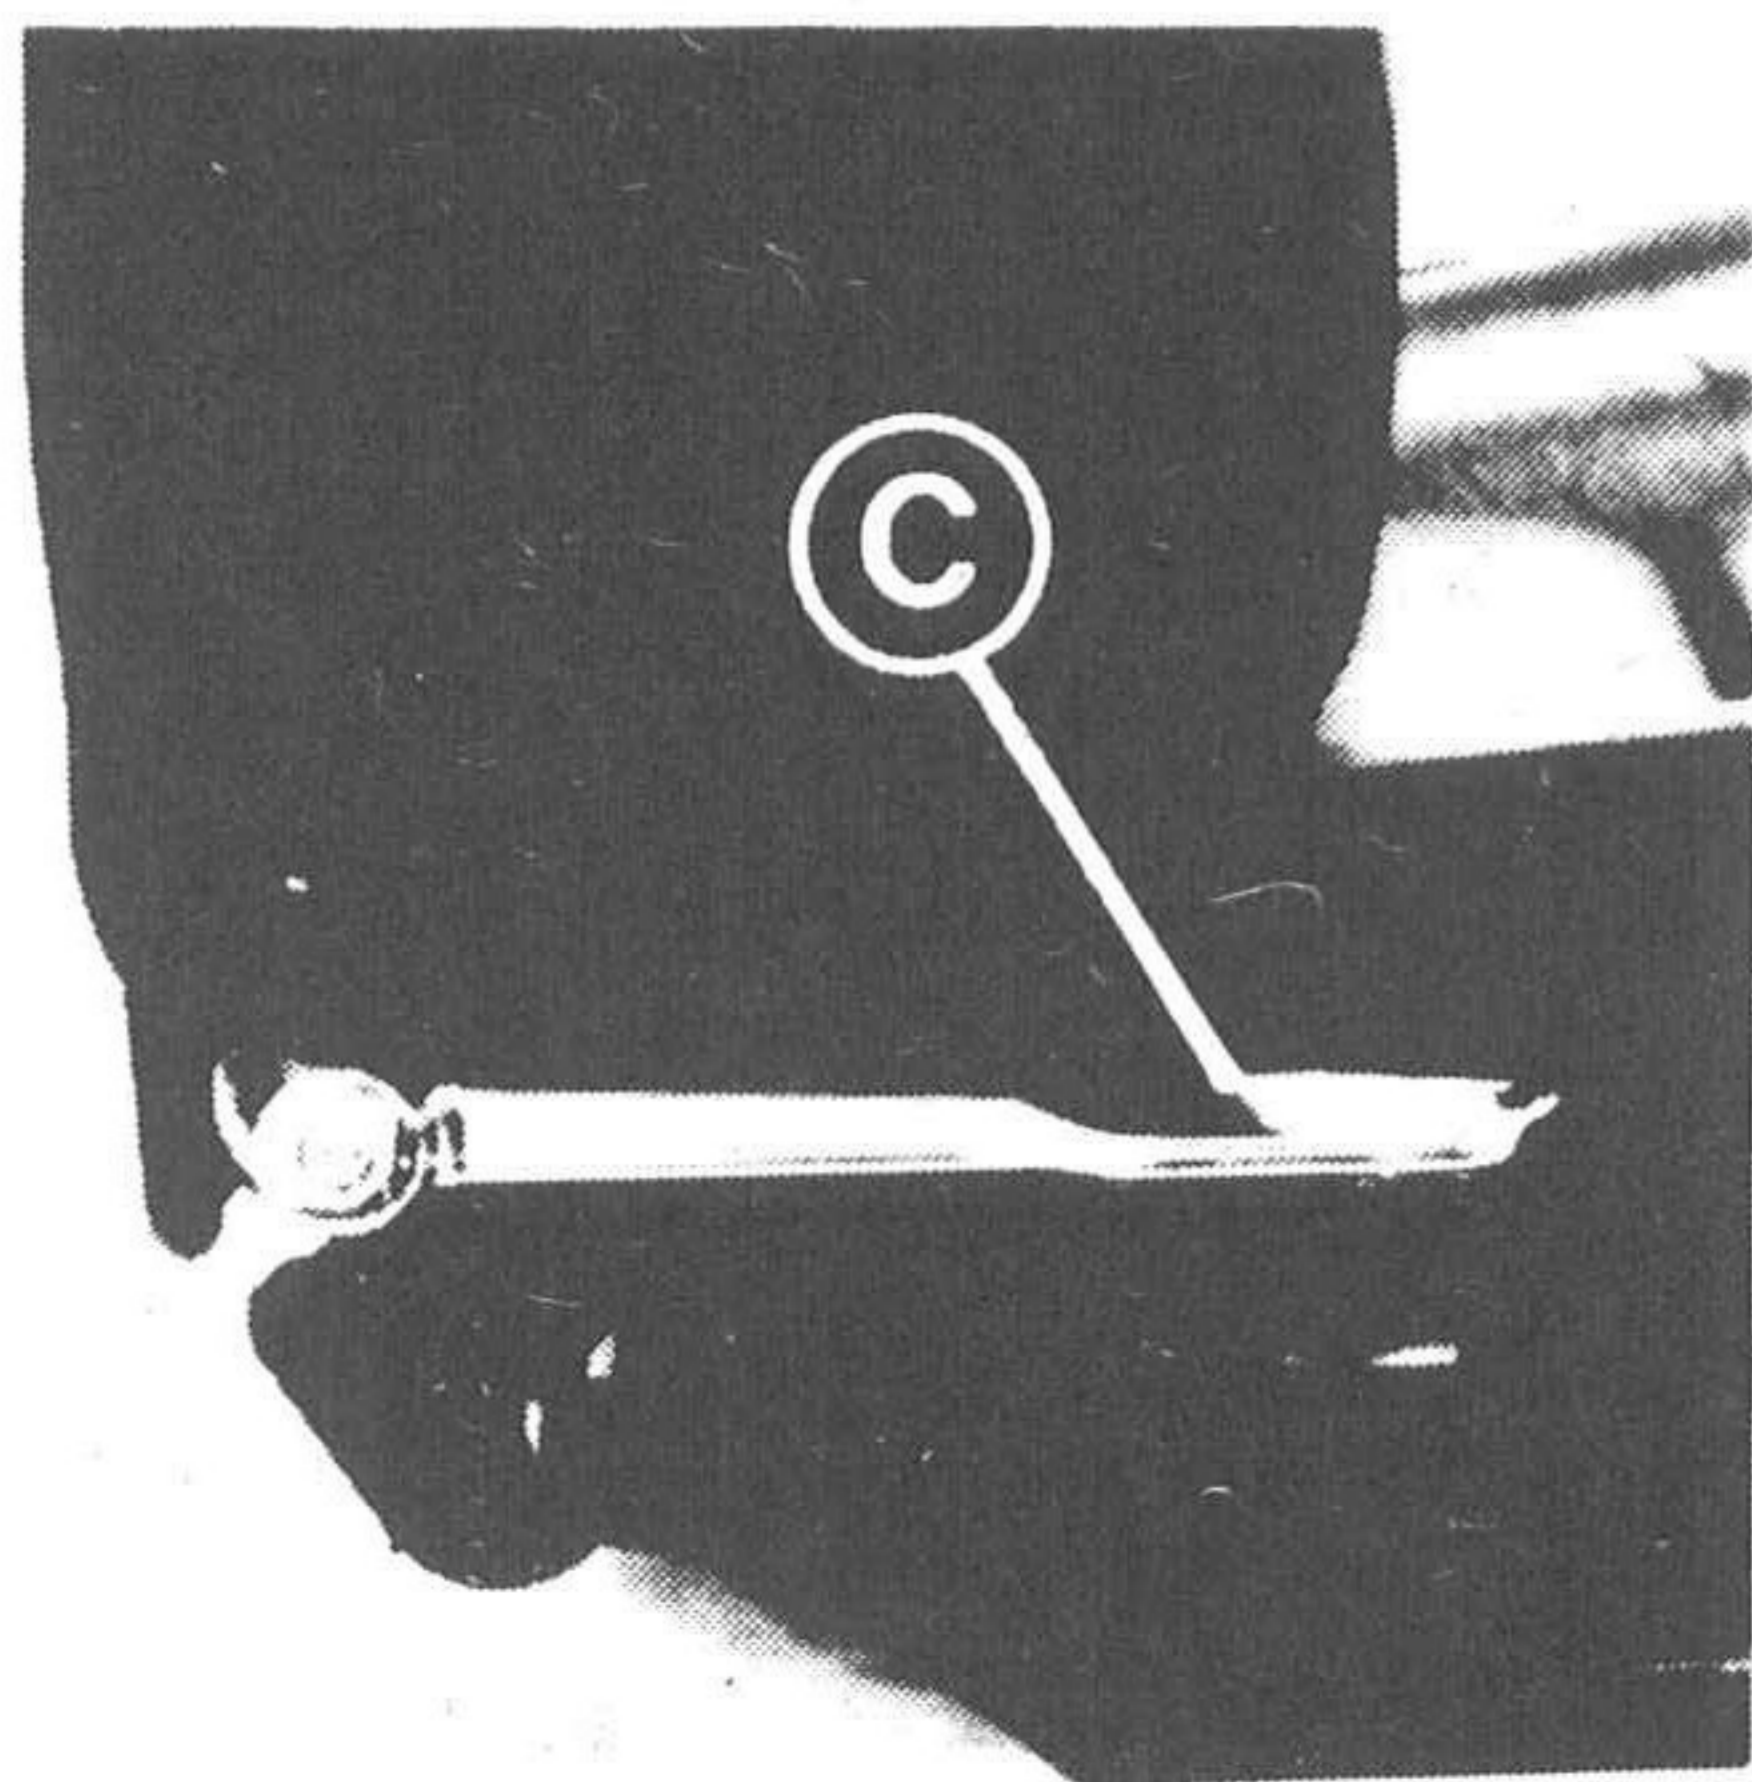


Fig 12

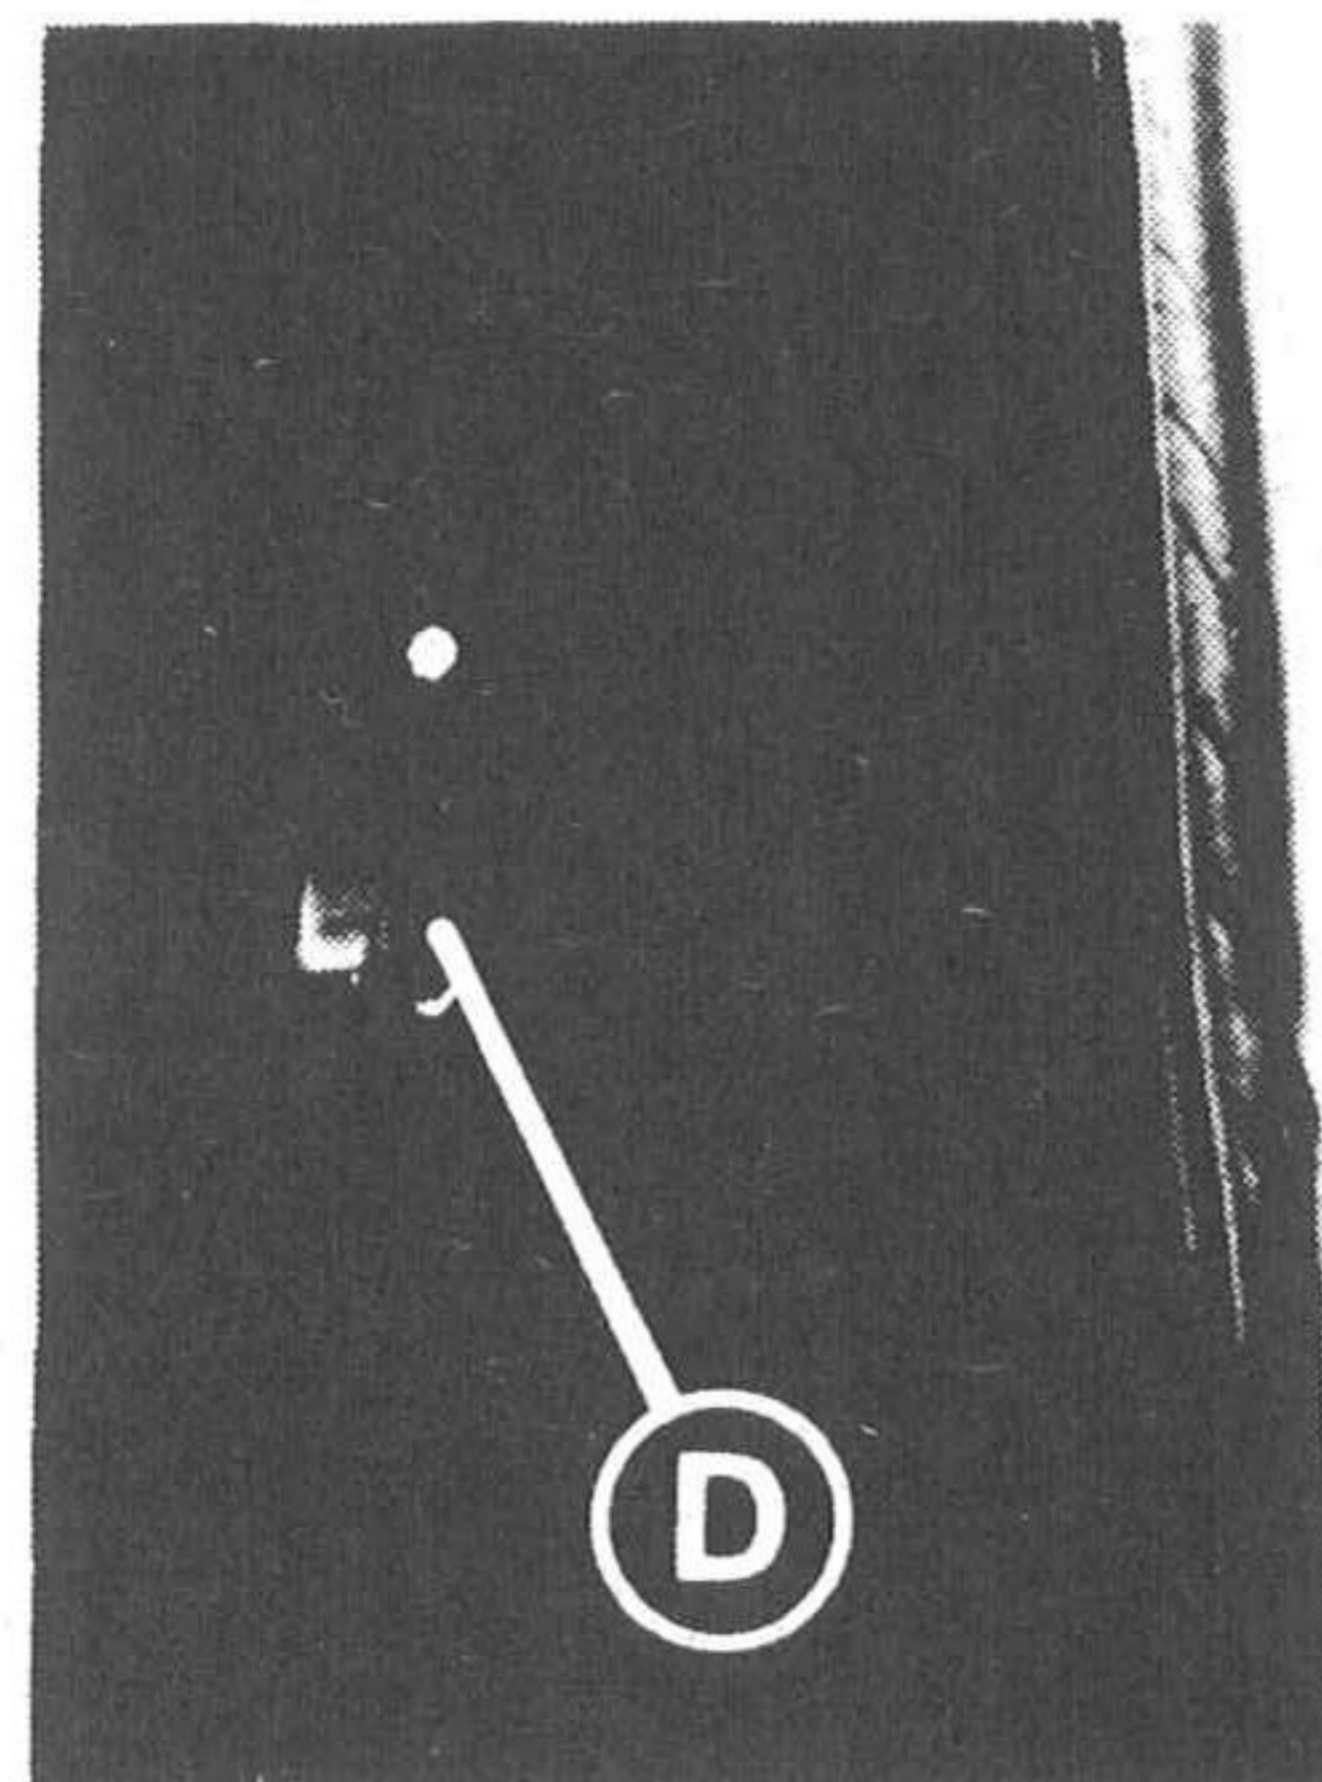


Fig 13

Steering Column

To adjust, slacken off the clamp 'A' on the right-hand side of the steering column below the fascia, move the steering wheel and column to the desired position and retighten the clamp. This provides adjustment for both height and reach.

Seats

The seats are fully adjustable for leg reach and angle of the backrest. To adjust for leg reach, the lever 'B' (Fig 11) under the front edge of the seat is moved sideways and the entire seat is moved forwards or backwards to give the required reach. The lever is then released, and its catch will engage in the nearest locking notch.

To adjust for angle of backrest, lift the lever 'C' (Fig 12) at the junction of the seat and backrest on the outward side of each seat, move the backrest as required and release the lever.

To hinge the backrest forward for access, lift the lever 'D' midway along the outward side of each backrest.

Seat Belts

Inertia reel tension permits normal movement for control. To secure the belt, see that it is not twisted, draw the tongue over the shoulder and across the chest, and insert the tongue of the fastener into the slot in the buckle unit nearest the user. A click denotes correct engagement. To release, press the button on the buckle unit.