



Introduction

The contents of this Handbook will familiarise the owner with the controls and main features of the AC 3000 ME. The information relates to a car to current specification, but the Company reserves the right to vary this specification in the interests of product efficiency, in this view of its policy of constant development. Such modifications may be introduced with or without notice. Mechanical operations described herein are those within the scope of an owner of reasonable non-professional ability. Major overhauls, replacements etc. not given in these pages call for special equipment, tools, measuring devices, etc. To ensure reliability and safety, these operations should be entrusted to the manufacturers or to an accredited AC dealership having the necessary facilities.

The terms Right-hand (RH) and Left-hand (LH) used here refer to the view forward from the rear of the car, except in the case of the engine/gearbox unit, where they relate to the assembly as viewed from the clutch end.

Identification Numbers

Vehicle Number: on plaque, on bulkhead of front compartment

Engine Number: on top face of crankcase, rear of right hand cylinder block

Gearbox Number: on top of differential housing

Keys

Duplicate keys are provided with the car. Make a note of all key numbers, in case replacements become necessary. It is suggested that the spare set of keys be carried by the owner, e.g. on a key ring, and not in the car, where they may inadvertently get locked in.