

A At 450 miles 750 km	B Every 6000 mi. 10000 km or 6 months	C Every 12000 mi. 20000 km or 12 months
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•
•	•	•

Transmission

- Check oil in transmission, top up
- Drain off gearbox oil and refill (ONCE ONLY, at 6000 miles (10000 km))
- Grease drive shaft outer universal joints
- Check hydraulic fluid reservoir (clutch), top up
- Renew hydraulic fluid, check for leaks and bleed

Steering and Suspension

- Check steering rack for oil leaks at gaiters
- Lubricate all grease points
- Grease suspension ball joints, pivot pins and drive universal joints
- Check steering retaining fixings and rack clamp nuts
- Check suspension and shock absorbers, and mountings for efficiency, wear and leaks
- Check tightness of speedometer knurled nut
- Grease speedometer drive gear, behind right front wheel RHD, left front wheel LHD
- Lubricate steering rack if necessary.

Brakes

- Check functioning of all brakes
- Check level of hydraulic fluid in tandem reservoir
- Inspect hydraulic system for leaks, hoses for chafing
- Check handbrake cable adjustment
- Lubricate handbrake operating mechanism, check action
- Inspect all brake pads
- Renew hydraulic fluid, check for leaks and bleed

Wheels and Tyres

- Check tyre pressures
- Check tyre condition, depth of tread
- Check road wheel nuts for security
- Check front wheel toe-in