


Console

1 Radio/Tape Deck

Radio or optional Tape Deck in top section of console. Switching on radio elevates the electrically-extended antenna; switching off retracts it. Twin speakers located one in each door panel.

2 Indicator Lamps

Left: Blue – headlamps main beam “on”.
Left Centre: Amber – low level of hydraulic fluid, also handbrake “on”.
Right Centre: Green – flashers “on”.
Right: Red – ignition.

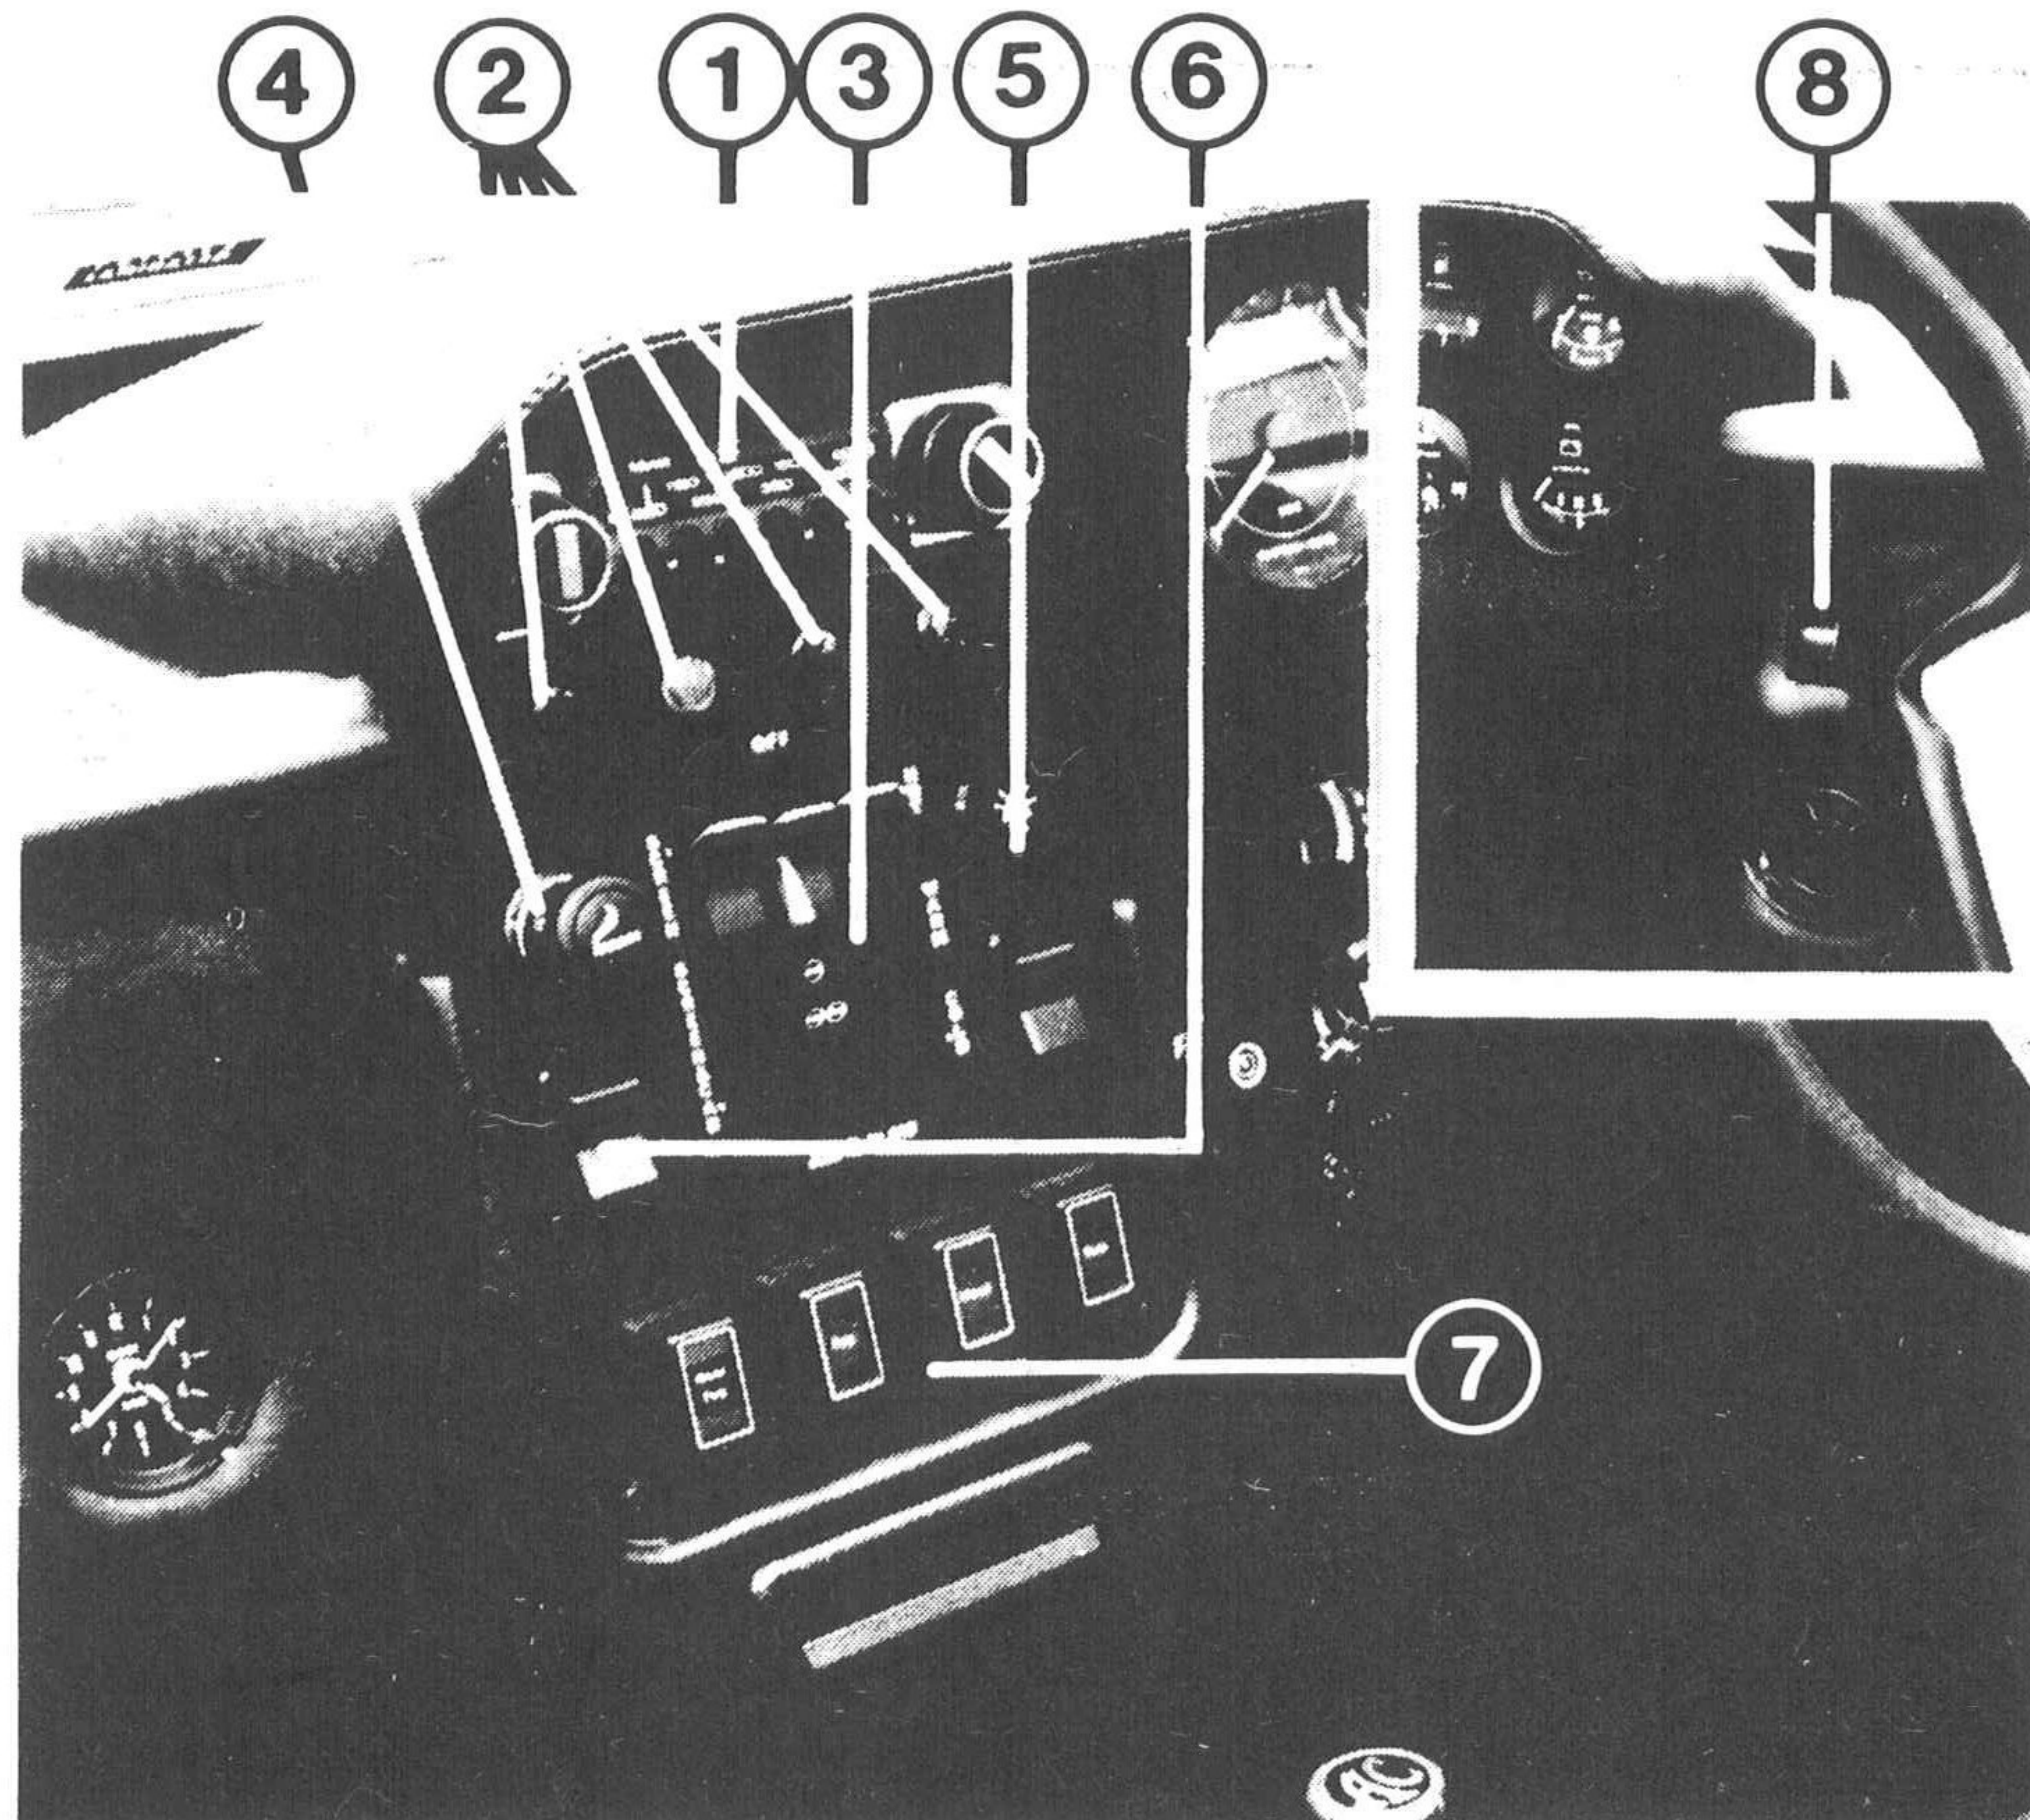

3 Heater and Ventilation

Three levers in panel in centre of console.
Left: Air distribution.
Centre: Air flow.
Right: Heat and Cold Air (See page 9).

4 Cigar/Cigarette Lighter

Left of heater panel. Press in to activate.

5 Hazard Switch

Right of heater panel. Operates all flashers simultaneously. Switch illuminated when “on”.

6 Window Switches

Rocker switches for electrical raising and lowering of side windows, left and right of heater panel.

7 Lamp Switches

Four push-push switches in lower section of console.
Left: Rear fog lamps inoperative until side/rear lamps are “on”.

Left Centre: Front fog and spot lamps. (Twin spot lamps on l/h drive cars).

Right Centre: Headlamps, inoperative until side/rear lamps are “on”. (See “Steering Column Controls” P.8).
Right: Side and rear lamps.

8 Reserve Fuel

Rocker switch to right of console brings in reserve fuel supply of 2½ gallons (11.4 litres). Illuminated when “on”. Check occasionally by operating the switch; correct functioning is indicated by an audible click.

9 Instrument Lighting

Rheostat to control intensity of instrument lighting is to the right of the console. Turn the knob clockwise to increase, anti-clockwise to decrease intensity.

Fig 4