

Windscreen Wipers

The windscreen wipers are controlled by the left-hand lever on the steering column (see Page 8, Fig 8) to give (a) single wipe, (b) intermittent wipe at 10-sec. intervals, (c) normal wipe and (d) high speed wipe.

The complete wiper arm fits on to a spline and is secured by a spring clip. To remove an arm, insert the blade of a broad screwdriver under the boss and impart a twisting motion.

To renew a wiper blade, raise the arm from the windscreen until it is in the service position. Push out the spring-loaded hinge pin and take off the blade.

Windscreen Washer

The windscreen washer is operated by pushing in the wiper control arm (see Page 8, Fig 8). The motor and reservoir 'A' (Fig 45) are on the side of the front compartment. Always keep the reservoir topped up, and use the recommended proportion of a screenwasher additive to improve visibility. Never add anti-freeze to the water, as this will damage paint and rubber.

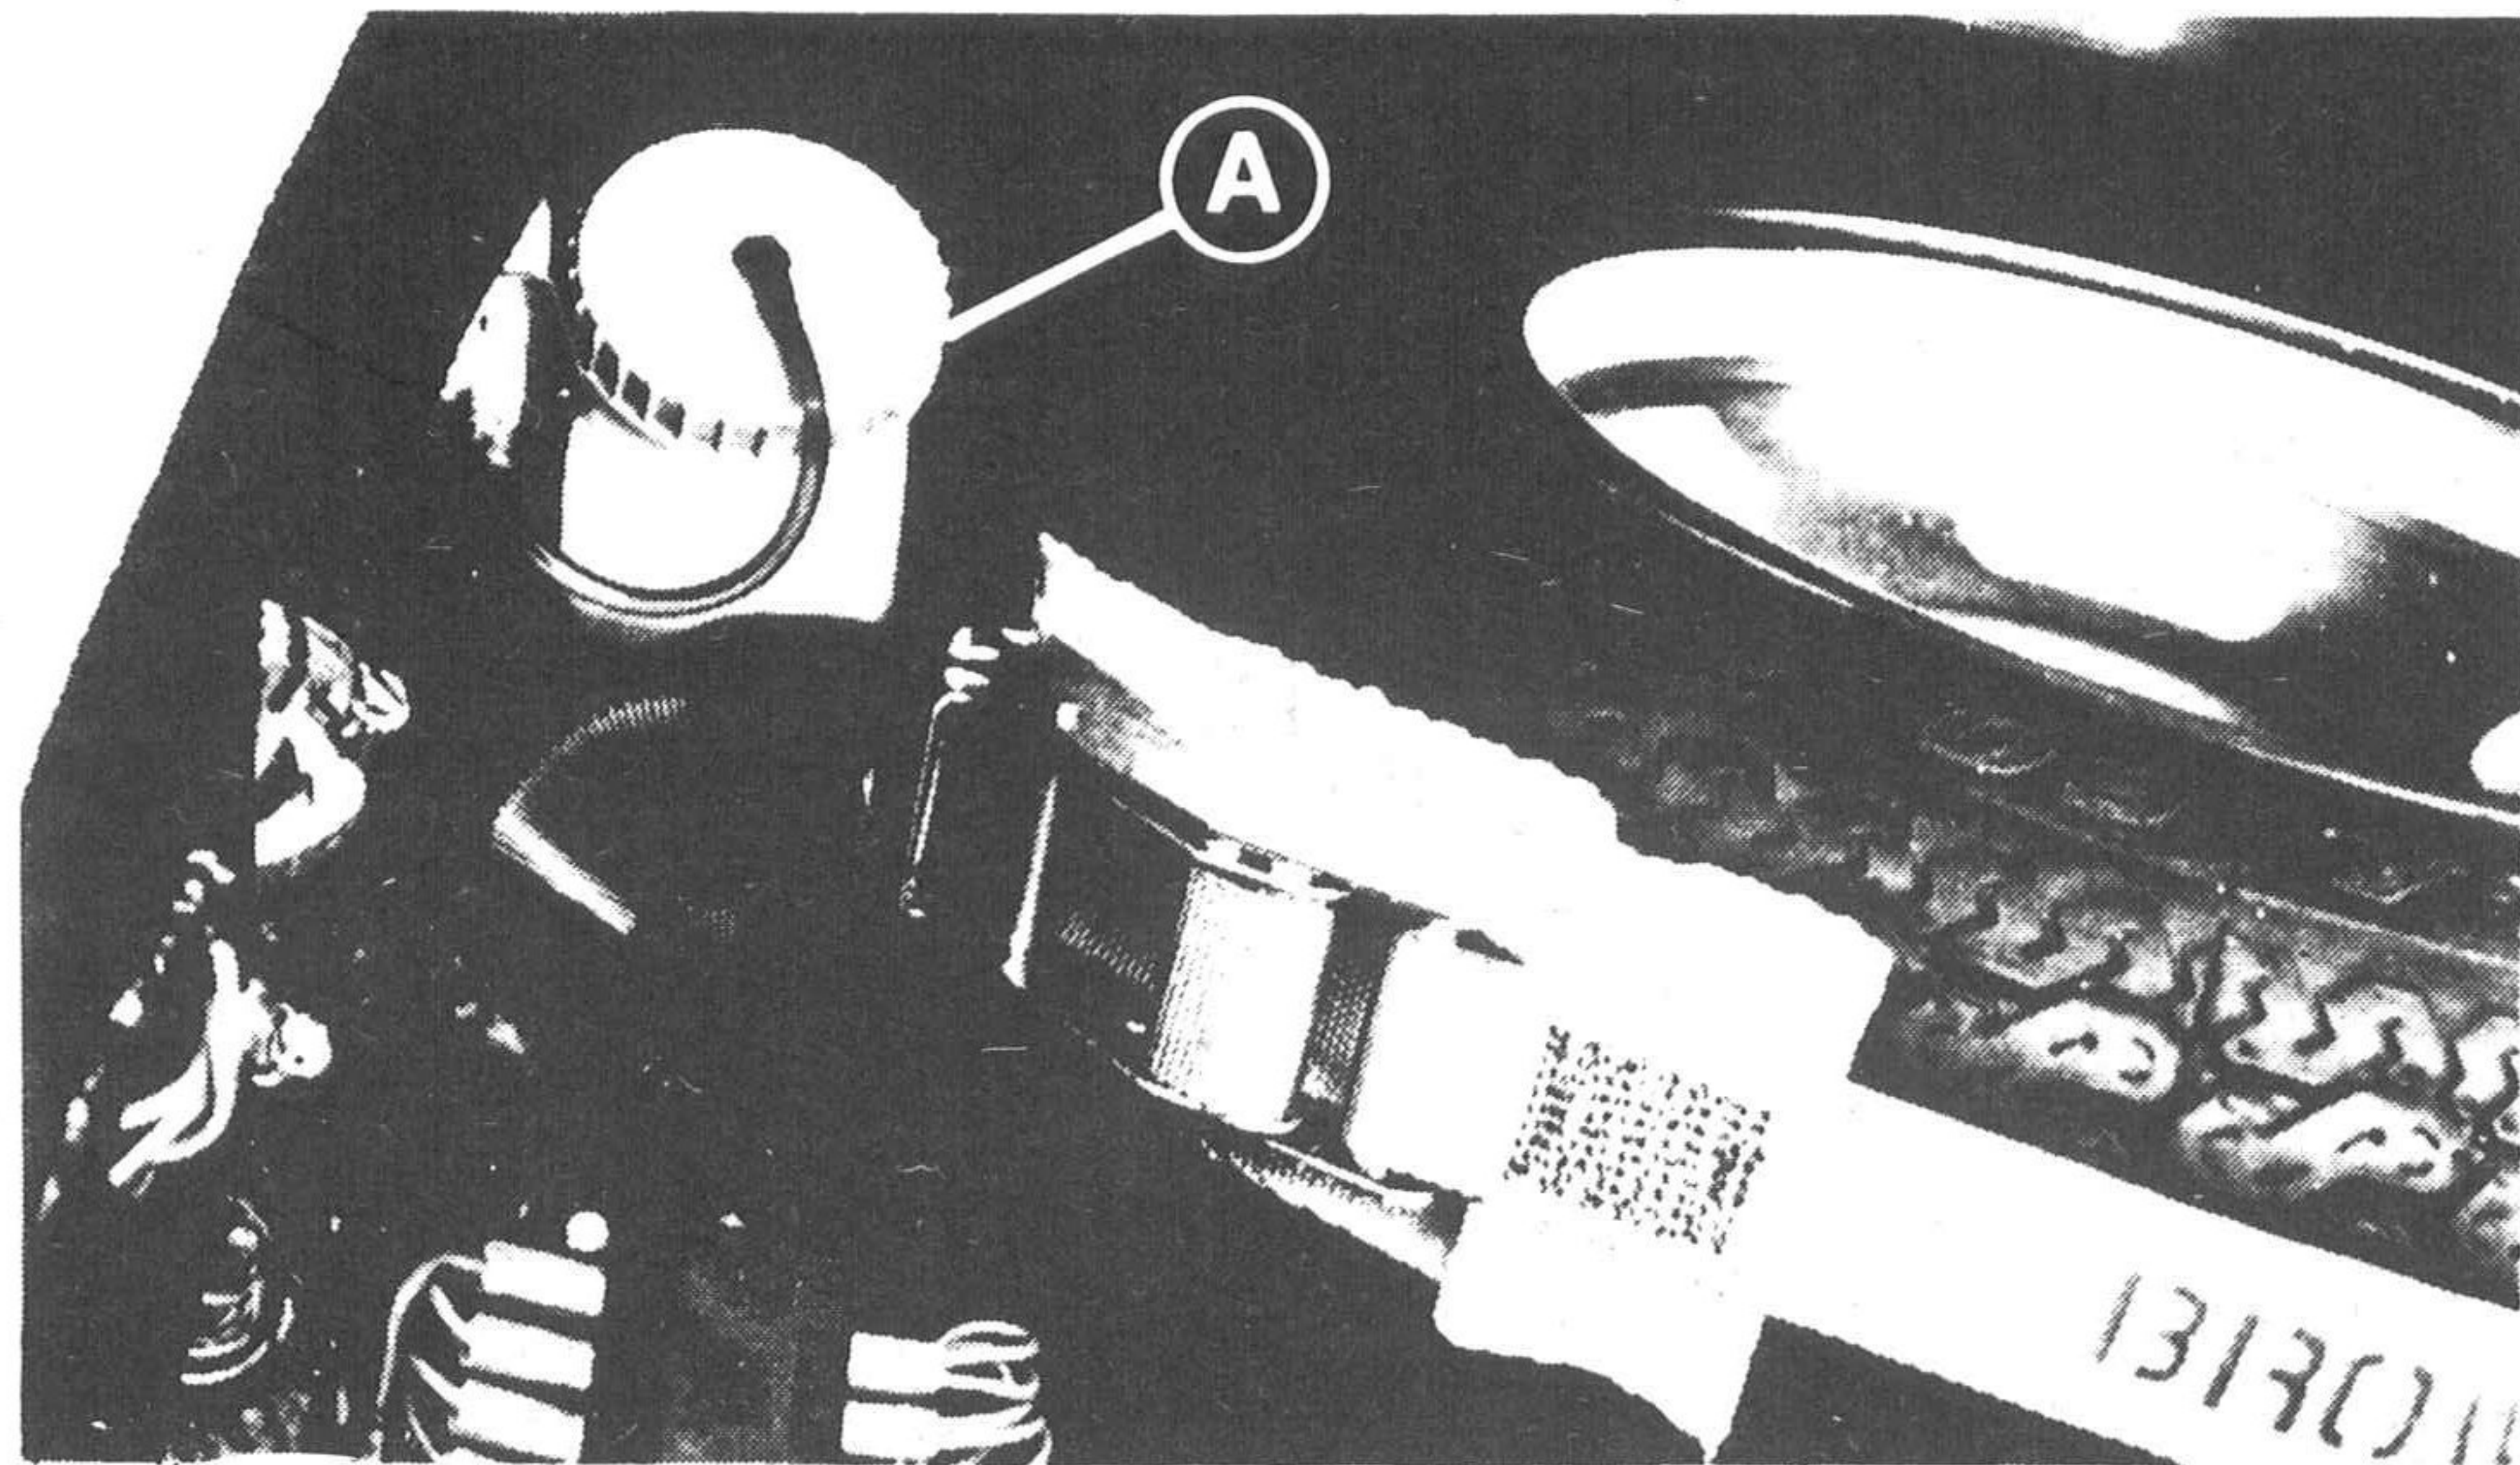


Fig 45

SERVICE

Forecourt Service

Fuel. This should be to 97 Octane Rating (Research Method) which is British Standard 4-star.

Lubrication. Top up with a lubricant of the same designation and rating as that already in use. Do not mix oils of different manufacture. Use only a lubricant from the approved list on Page

Coolant. (See Fig 25 on Page 18.)

WARNING. Never release the filler cap 'B' of the header tank when the engine is hot, unless pressure is released by removing the pressure cap on the expansion tank, as the water is above boiling point at atmospheric pressure, and severe scalding may result.

Care must be taken when removing the pressure cap 'A' from the expansion tank when the engine is hot. Using a glove or cloth, slowly and carefully turn the expansion tank cap anti-clockwise until it comes up against the safety stop. Wait until all pressure is released; then press down the cap to clear the safety stop, turn and lift off. Only then may the filler cap of the header tank be removed for topping-up the cooling system. The expansion tank should be maintained at the half-full mark, but should only be topped up when the engine is cold.

Screen Washer. Top up the reservoir in the front compartment as required, with clean water. A small quantity of a recognised screen washer additive will prevent smearing. Never add anti-freeze solution,